



SYNC Language Settings

	English	English	Spanish	French
		English	Espanol	Francais
	Description	Display TAG		
1	Phone Menu	PHONE MENU	MENÚ TEL	MENU DU TÉL
2	System Settings	SYS SETTINGS	CONF SISTEMA	PARAM. SYST
3	Advanced	ADVANCED	Conf avzda	Avancés
4	Language	LANGUAGES	Idiomas	Langues
5	English / French / Spanish	English	Espanol	Francais
6	Return	RETURN	VOLVER	RETOUR

Changing the language setting

SYNC allows you to select from three languages: American English, Canadian French and North American Spanish. Once selected, all radio display messages and prompts will be in the selected language.

To access the language menu:

Note: To scroll, press SEEK.

- 1 Press to enter the PHONE MENU.
- 2 Scroll repeatedly until SYSTEM SETTINGS appears in the radio display.
- 3 Press OK to confirm and enter the SYSTEM SETTINGS MENU.
- 4 Scroll repeatedly until ADVANCED appears in the radio display.
- 5 Press OK to confirm and enter the ADVANCED MENU.
- 6 Scroll repeatedly until LANGUAGE appears in the radio display.
- 7 Press OK to enter the LANGUAGE MENU.
- 8 Scroll repeatedly to cycle through ENGLISH, FRENCH and SPANISH.
- 9 Press OK when the desired selection appears in the radio display. If you have changed the language setting, the radio display will read UPDATING. Once the change is complete, SYNC will confirm the change audibly and in the radio display. SYNC will then take you back to the LANGUAGES MENU.